

# Contaminated land assessment guidance

## New connections



This guidance is based on protocols published by agreement between Water UK and the Home Builders Federation and is aimed at providing additional guidance on our requirements when developing a site.

## Introduction

### Why do we need to do know about any contaminated land?

Increasingly more brownfield sites are being used for development. Selection of an inappropriate pipe material or components for the conditions of the site could have significant consequences for Severn Trent Water and our customers. For example, certain compounds such as petroleum hydrocarbons and solvents can permeate commonly used plastics pipes, compromising water quality to an extent that it may be unfit for human consumption. Similarly, corrosive chemicals can reduce the service life of metallic pipes unless they have suitable protection. The potential presence of contamination in brownfield sites therefore requires careful selection and evaluation of an appropriate pipe material to provide long term protection to both water quality and structural integrity.

### How do we select the right pipe?


In January 2011, UK Water Industry Research (UKWIR) published "Guidance for the Selection of Water Supply Pipes to be used in Brownfield Sites" (Ref 10/WM/03/21; the 'UKWIR Guidance'). Its aim is to ensure that the correct materials are selected for water pipes and components to be used below ground in brownfield sites to protect the quality of drinking water whilst taking into account the service life of the water distribution system. It supersedes the Water Regulations Advisory Scheme (WRAS) Information and Guidance Note 9-04-03 "Laying Pipes in Contaminated Land" which has been withdrawn.

The UKWIR Guidance is for use by developers, self-lay organisations, water companies and consultants when planning, designing and constructing water mains and/or services in brownfield sites. It defines brownfield sites as "land or premises that have previously been used or developed. They may also be vacant or derelict. However, they are not necessarily contaminated." The UKWIR Guidance states that it does not apply to greenfield sites; however, we consider this supplementary guidance and the relevant sections of the UKWIR guidance as being equally suitable for application to those greenfield sites considered to be potentially affected by contamination. Where greenfield sites are not affected by contamination a preliminary risk assessment (see below) will suffice.


The UKWIR Guidance also states that there should be no departure from its provisions "*except where formally approved by the Water Company, such departure being technically justifiable or representing advances in knowledge or product development*".

We have adopted the UKWIR Guidance in principle and produced this supplementary guidance which includes the Risk Assessment for Water Pipes (the 'RA').

This guidance does not cover operative safety, health exposure modelling or accidental pipe damage.

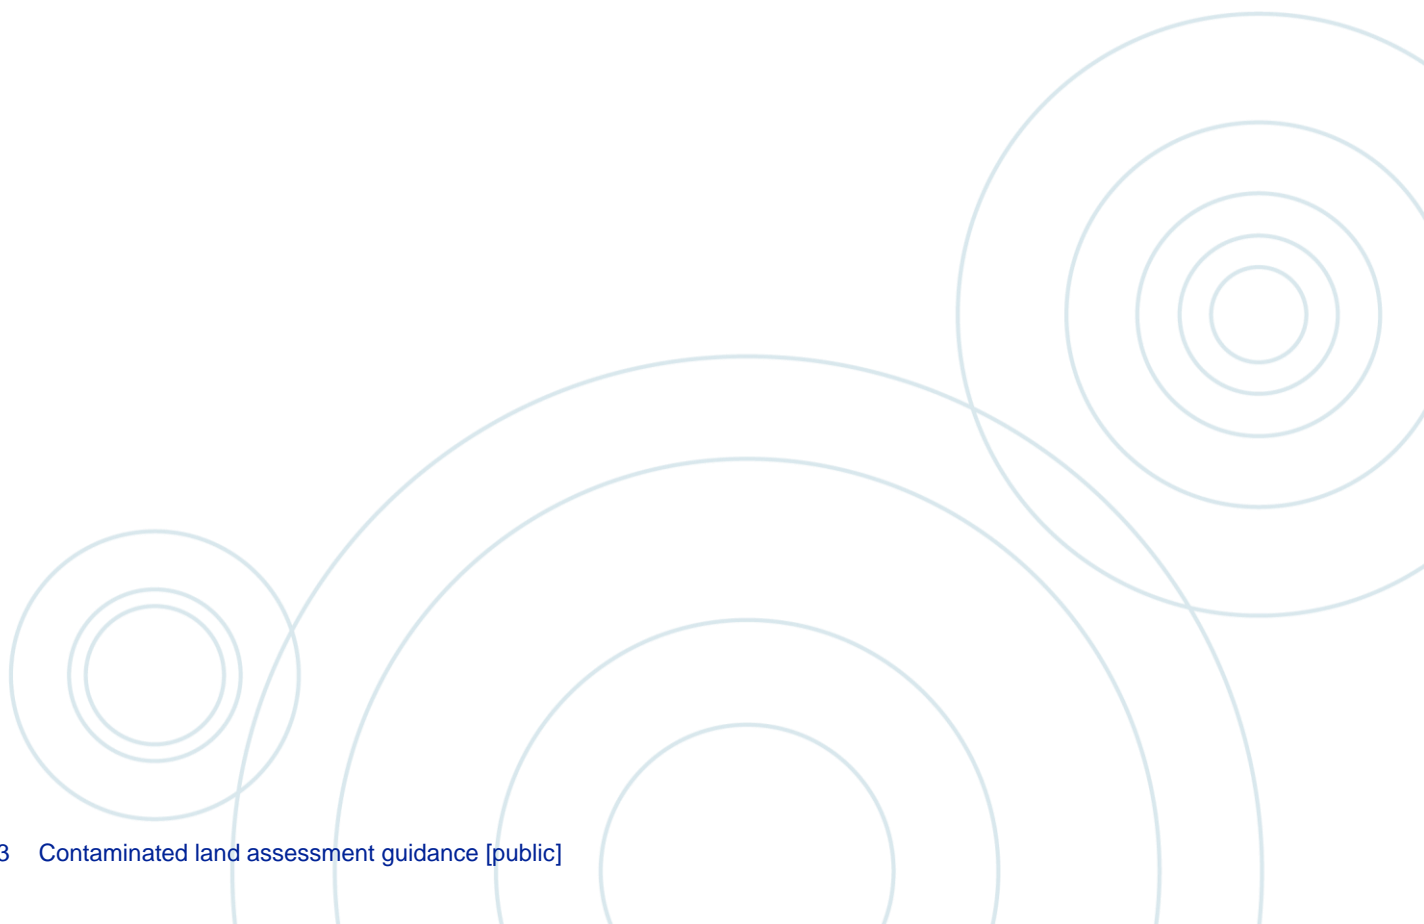

## Determination of pipe material

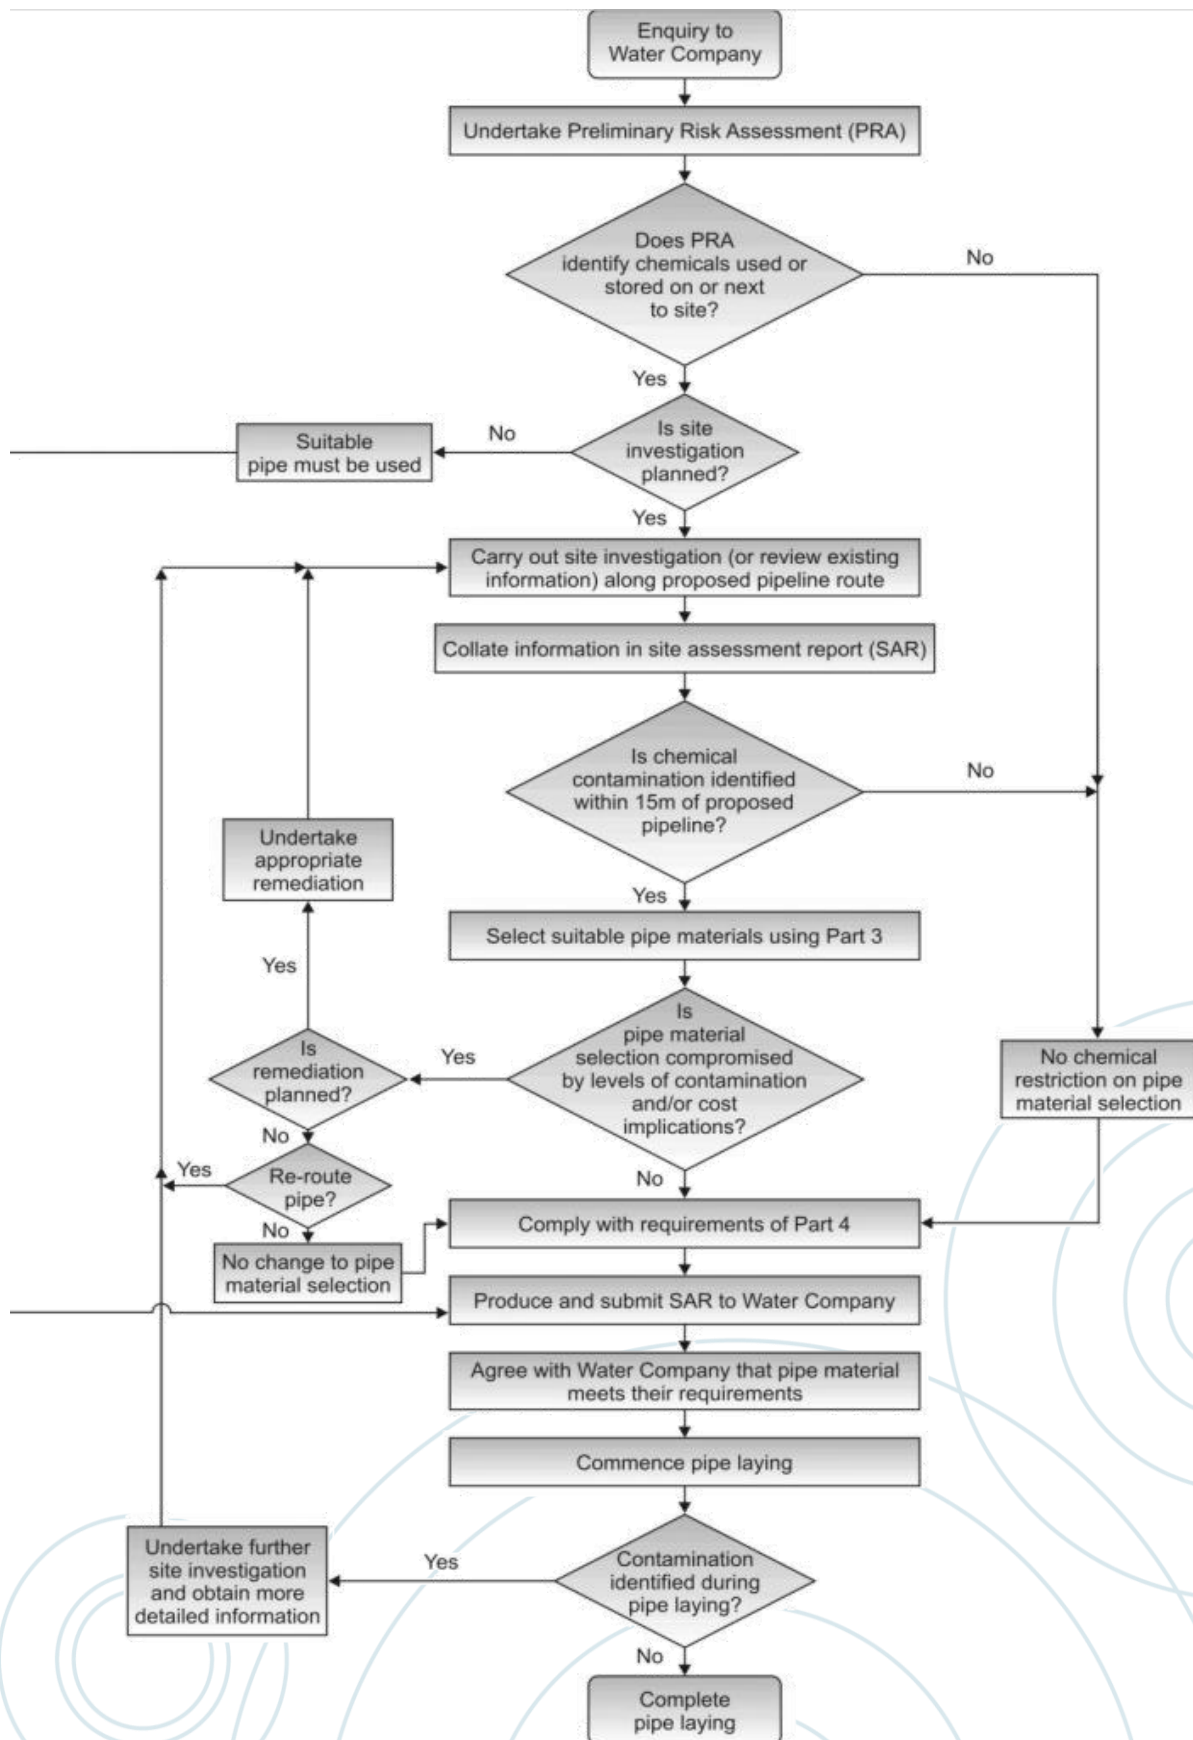

## Risk assessment for water pipes in land potentially affected by contamination

Any application for new water supplies to a development (construction of new properties, or renovation or conversion of existing buildings) in land potentially affected by contamination shall include a completed RA.

As a minimum a desk study (preliminary risk assessment) shall be provided with the RA in accordance with the framework in Environment Agency publication “Model Procedures for the Management of Land Contamination” (ref: CLR11) that sets out whether the land through which the pipes are to be laid may be affected by contamination. The application of the source, pathway, receptor concept will be an integral part of any pipeline risk assessment. For each potential source (the contamination) and each potential receptor (the water pipe), consideration shall be given to whether a potential pathway between source and receptor exists, or may exist in the future, linking the two. There are normally only three pathways by which contamination may come into contact with water pipes. These are direct contact with the soil or backfill, an excessive vapour phase or a contaminated groundwater regime. If none of these conditions exist on site (adopting the source, pathway, receptor concept) then it is likely that extended and/or targeted soil testing will not be required and a simple risk assessment will suffice. For those sites where land may be affected by contamination appropriate testing shall be undertaken on the materials within which the pipes are to be laid, whether that be existing ground materials, remediated materials or imported capping materials. The testing requirements are as described in the following section.

The signatories of the Water Supply Application Form and the RA must ensure that all assessments of land condition have been carried out in accordance with applicable current standards and guidelines by or under the direction of a suitably qualified competent person.

The competent person to be a) a chartered member of an appropriate professional body (such as the Institution of Civil Engineers, the Geological Society of London or the Royal Institution of Chartered Surveyors) with relevant experience of investigating contaminated sites or b) a Specialist in Land Condition (SiLC) with appropriate geo-environmental experience.

### Testing requirements

The soil, rock and if appropriate groundwater tests that are required on all sites where the potential for organic contamination has been identified in the desk study and where water pipes are proposed to be laid must be accredited by United Kingdom Accreditation Service (UKAS) as a minimum and where commercially available the Environment Agency’s Monitoring Certification Service (MCERTS). These accredited tests should be undertaken for:

Banded hydrocarbons EC5-EC10, EC10-EC16, EC16-EC40 (Total aliphatic and aromatic hydrocarbons for each banding may be summed). Aliphatic/aromatic fractionation and subsequent banding may be required should a more detailed site specific risk assessment be undertaken. The bandings have been amended to take into account readily available laboratory tests. The equivalent carbon number (EC) is used to assess petroleum hydrocarbon mixtures rather than the actual number of carbon atoms in the molecule in line with guidance issued by the Environment Agency (2005).

Volatile organic compounds (VOCs) (method by head space or purge & trap GCMS) with tentative identification of compounds greater than 20µg/kg. The method used should be capable of detecting a wide range of compounds listed in US EPA Method 8260C or similar.

The method should include analysis of naphthalene.

BTEX (Benzene, toluene, ethyl benzene and xylenes) plus MTBE (Methyl-tertiary butyl ether) (by head space GCMS)

Semi-Volatile Organic Compounds (SVOCs) (method by GCMS) with tentative identification of compounds greater than 20µg/kg. The method used should be capable of detecting the compounds listed in US EPA Method 8270D or similar. The total concentration of SVOCs excludes polycyclic aromatic hydrocarbons, ethers, nitrobenzene, ketones, aldehydes, phenols, cresols and chlorinated phenols. Phenols, cresols and chlorinated phenols which are detected by the SVOC analysis are given their own assessment criteria.

Table G1 and Table 3.1 of the UKWIR Guidance are not considered to be a definitive guide for assessing total concentrations. Table 1 in the RA below replaces Table 3.1 of the UKWIR Guidance.

Where previous site uses include the use, storage, treatment, disposal or manufacture of any of the following, appropriate testing for these substances will be required:

*Ethers, nitrobenzene, ketones, aldehydes and amines.* Note that the presence of amines on any site at the proposed pipe depth +/- 1.0m precludes the use of polyethylene. The methods of analysis and method of calculation of total concentrations of these compounds will need to be agreed with water company.

To comply with the testing requirements, the suites of tests that are required on all brownfield sites where wrapped steel, wrapped ductile iron or copper pipes are to be laid as minimum must include:

*pH, Conductivity and redox potential*

## Sufficiency of testing

Water pipes are normally laid at between 0.75m and 1.35m from finished ground level to crown of pipe. Samples taken and tested must represent both a) the soil in which the water pipes are to be laid and b) the soil down to at least 500mm below the underside of the proposed pipe. Where the proposed depth of the pipes is unknown at the time of application, soil samples representative of the ground condition between surface level and 1.5m below finished ground level shall be taken as a minimum. Where appropriate (see UKWIR Guidance) groundwater sampling and groundwater monitoring will also be necessary. Photo-ionisation detection (PID) monitoring along the proposed route of the pipeline may be employed, though this does not provide a definitive guide to the suitability of water pipe materials.

Where required a sufficient number of test results should be obtained from the material in which the pipes are to be laid. CLAIRE/CIEH 2008 "Guidance on comparing soil contamination data with a critical concentration" may be used, where appropriate, to justify the number of soil samples tested;

however, this statistical model should not be used on heterogeneous materials or used to average test results from different types of materials.

Further guidance on representative sampling is contained within BS10175:2011 Code of Practice for the Investigation of Potentially Contaminated Sites, the Department of the Environment's Contaminated Land Research Report "Sampling strategies for contaminated land" prepared by The Centre for Research into the Built Environment, Nottingham Trent University (Ref: CLR 4; 1994) and the Environment Agency's "Secondary Model Procedure for the Development of Appropriate Soil Sampling Strategies for Land Contamination" (ref: R&D Technical Report P5-066/TR; 2000).

Where remediation has been carried out on the site, the test results obtained from validation samples will be used in the assessment. Where a horizontal capping system has been or will be employed using materials spread across a site, sufficient samples will need to be taken to characterise the capping material used and the results presented. However, the sufficiency of sampling on the horizontal capping system, in which the pipeline will be placed, may be assessed on the basis of the source, quantity and type of materials used.

### Detection limits

Only positive concentrations, i.e. those above the limit of detection should be used in summation of VOC and SVOC (or other test groups of compounds i.e. phenols, cresols and chlorinated phenols). Laboratory methods shall provide a minimum limit of detection of 10µg/kg for each individual VOC or SVOC (or other test groups of compounds) quantitatively detected in accordance with the methods described above. For tentatively identified compounds (TICs), only those compounds with a concentration of 20µg/kg or greater shall be used in the summation of VOC and SVOC (or other test groups of compounds).

### Protective measures

Where polyethylene, ductile iron, steel or copper pipes are to be laid on a brownfield site or other land potentially affected by contamination (whether or not it has been remediated) and where the concentrations exceed the generic guideline values set out in Table 1 of the RA, the developer shall provide either:

- a) a robust risk assessment to show how any contaminants will not significantly impact on proposed water supplies or buried assets over the lifetime of the assets; or
- b) more suitable pipe materials; or
- c) an engineering solution to protect the pipe work backed up by an adequate assessment of the risk.

Liquid free phase product (e.g. oil or free solvent layers) shall not remain in the ground or groundwater in the vicinity of water pipes, whether barrier pipe or any other pipe materials are used.

When designing pipe routes on land potentially affected by contamination, new preferential contamination pathways along the route of new water pipes shall not be created. Particular measures may be required to prevent the possible migration of contamination through pipe bedding and into controlled waters.

## References

BS10175:2011 "Investigation of Potentially Contaminated Sites Code of Practice"

CLAIRE/CIEH "Guidance on comparing soil contamination data with a critical concentration" 2008

Department of the Environment Contaminated Land Research Report "Sampling strategies for contaminated land" prepared by The Centre for Research into the Built Environment, Nottingham Trent University (Ref: CLR 4) 1994

Environment Agency "Secondary Model Procedure for the Development of Appropriate Soil Sampling Strategies for Land Contamination" (ref: R&D Technical Report P5-066/TR) 2000

Environment Agency "Model Procedures for the Management of Land Contamination" (ref: CLR11), 2004

Environment Agency P5-080/TR3 "The UK Approach for Evaluating Human Health Risks from Petroleum Hydrocarbons in Soils", 2005

UK Water Industry Research (UKWIR) "Guidance for the Selection of Water Supply Pipes to be used in Brownfield Sites" (Ref 10/WM/03/21)" January 2011

Water Regulations Advisory Scheme (WRAS) Information and Guidance Note 9-04-03 "Laying Pipes in Contaminated Land" 2002

The risk assessment for water pipes will help you choose appropriate materials for your development. We are happy to deal with a risk assessment for water pipes in advance of any formal application for a new water supply.